

## Appearance and Buttons

Front view



**Power on:** Press the power button in the off state until the screen of the device lights up.

**Shutdown:** Press and hold the power button for a long time until the shutdown prompt appears. Press OK to confirm the shutdown.

**Off screen:** When the device is under normal operation, press the power button briefly, the screen will be closed.

**Hibernation:** Hibernation can be triggered by manually pressing the power button or setting the system to sleep.

**Wake-up:** The device lightly presses the power button while the device is in sleep state, and the screen lights up to wake up the system.

**Forced restart:** When the device is turned on, press and hold the power button for

 
more than 8 seconds to force the device to restart.

Two-color indicator: red charging indicator; green working status indicator.


Monochromatic indicator: Non-accessible card reader status indicator.


Note: If you do not use the device for a long time, please turn off the device.

Back view

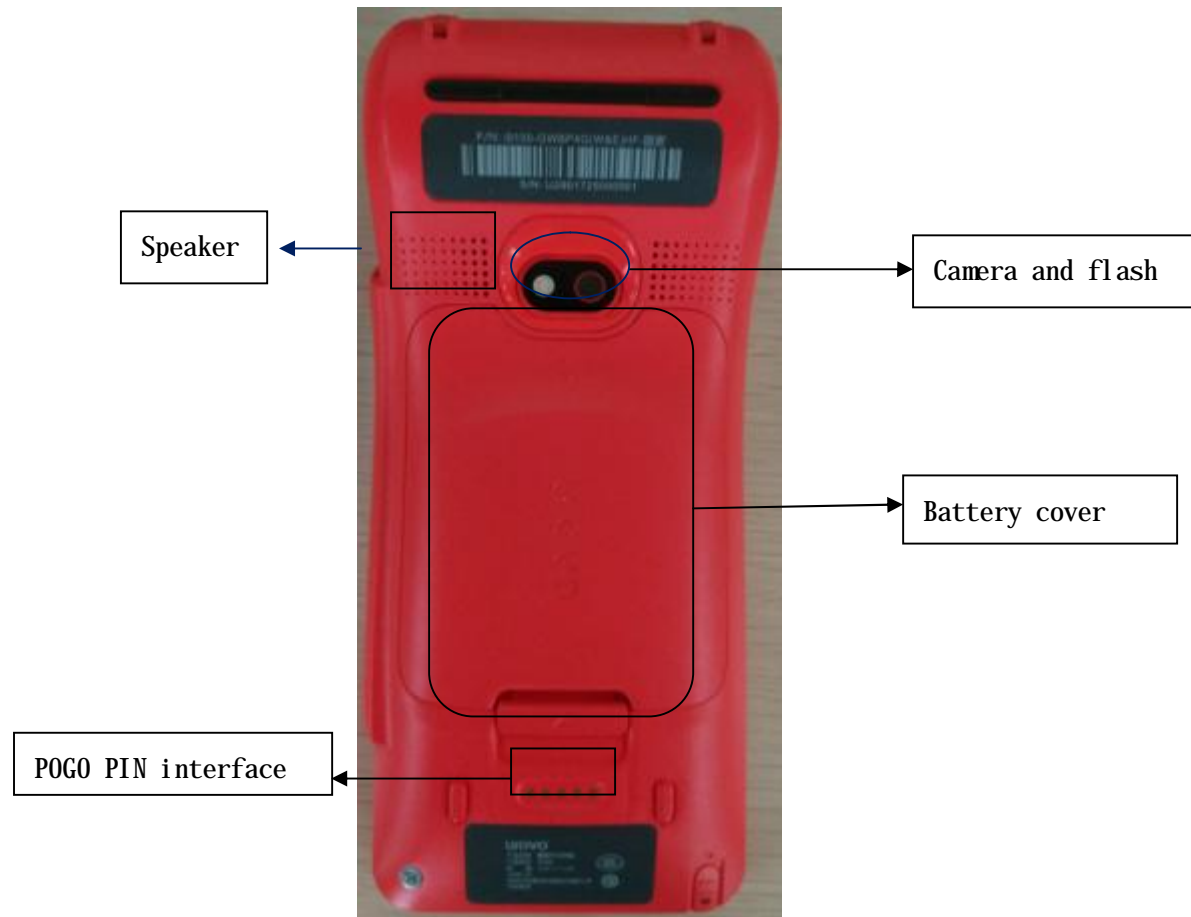

Side view

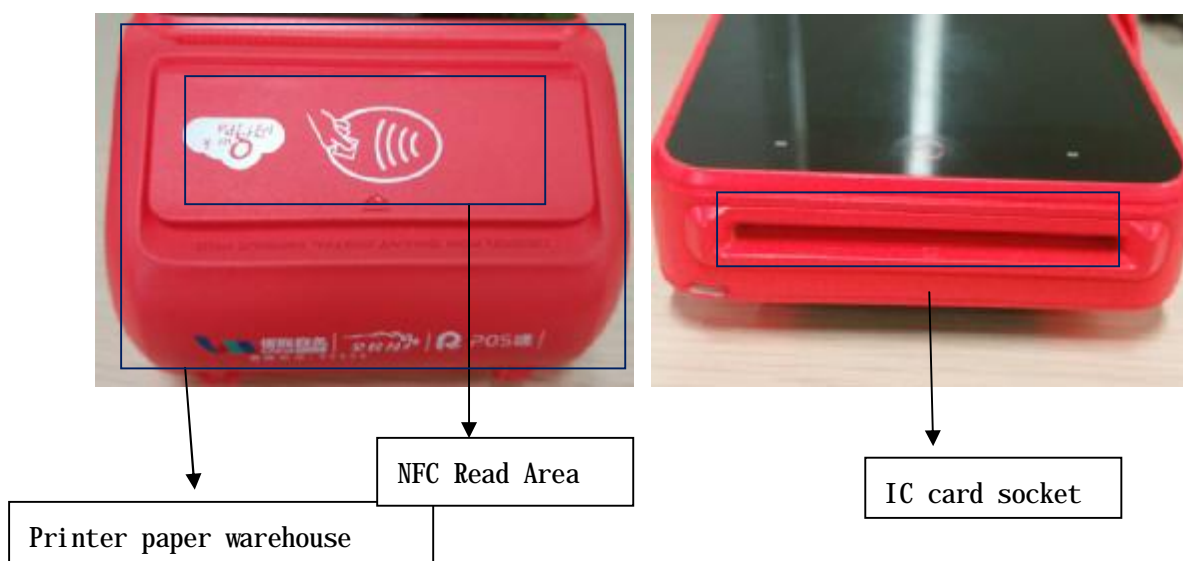 

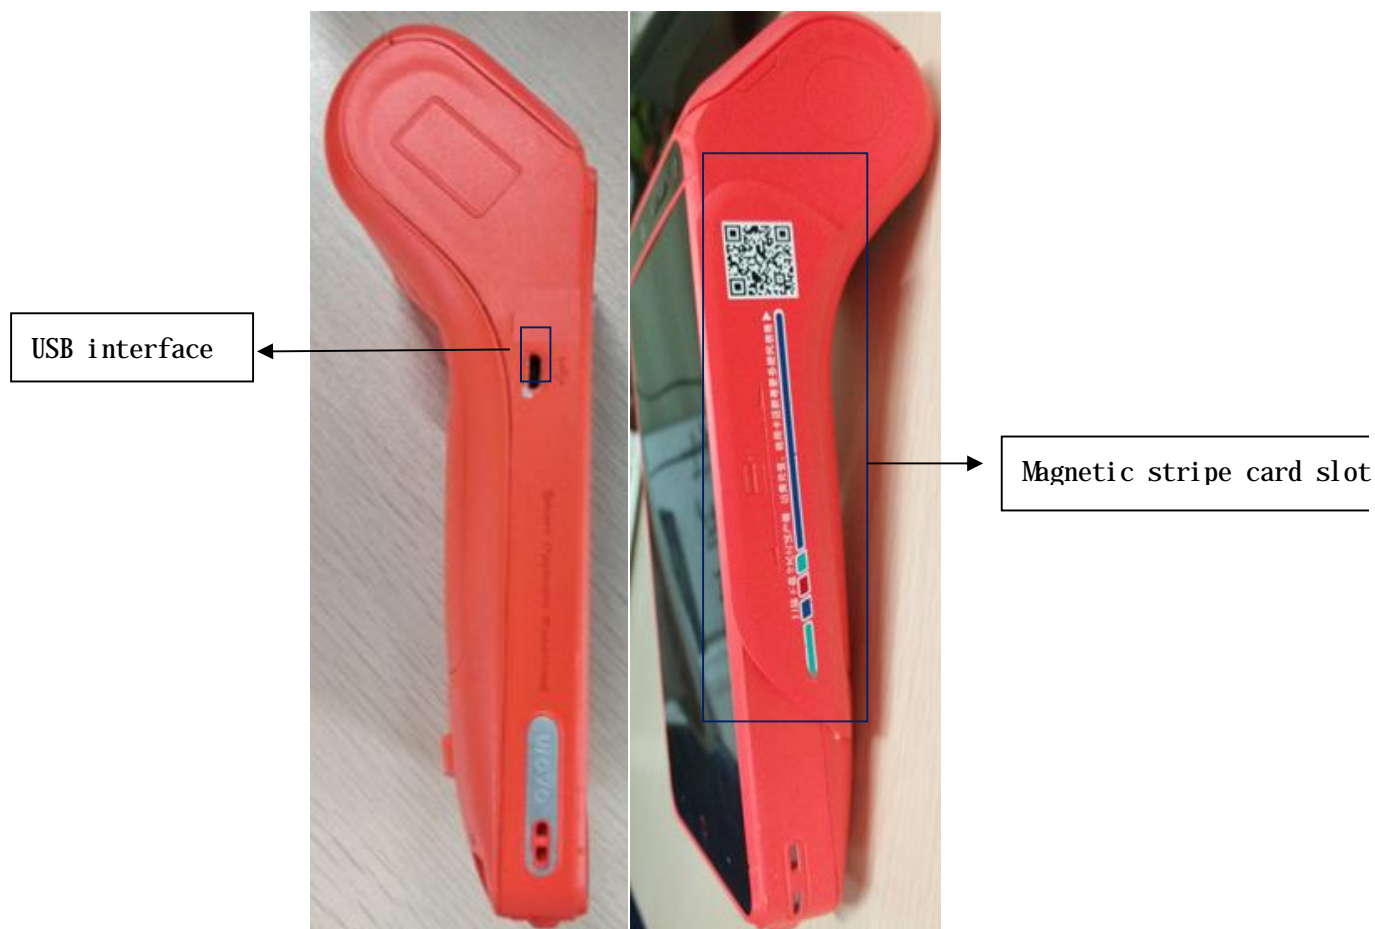 

### Battery charging instructions

#### Use direct charge

Insert one end of the USB data cable into the USB port of the power adapter, and then plug the other end into the USB port of the device to charge it. When the battery is in the charging state, the power indicator on the device is red, and after the battery is fully charged, the red light goes out.



Power adapter and data cable

#### Use the charger to charge

Place the device horizontally in the slot of the charger and hear a slight click sound. After the card is properly installed, the following picture is displayed:




Insert one end of the USB data cable into the USB port of the power adaptor, and then plug the other end into the USB port of the charger. When the host is placed into the charger, the charging status is directly viewed on the host. The power indicator on the host is displayed when the charger is charging. It is red and the red light goes out when it is fully charged.

After it is full, it takes only one hand to press the seat charger to pick up the host.

The battery of this device can only be recharged using the original specified power adapter, and non-original power adapters must not be replaced at will. Do not use metal contacts or artificially short-circuited battery electrodes. Do not put them in excessive heat, moisture, or corrosion. Do not crush or bump them.

After the battery is discharged, charge the battery in time. Do not store it for a long period of time under empty or full power. It is best to store about 50% of the battery power. If you do not use the device for a long time, remove the battery


from the device.

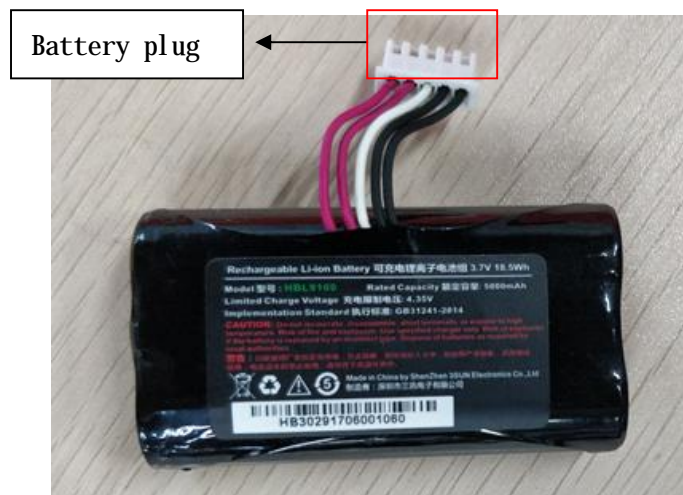

Note: If the battery has a bump or liquid leakage, replace the battery in time.

Note: When you get the battery for the first time, the remaining battery power may be only about 50%. You can charge it through the included power adapter. The first charge is recommended to be more than 8 hours.

### SIM card /SAM card / TF / battery installation

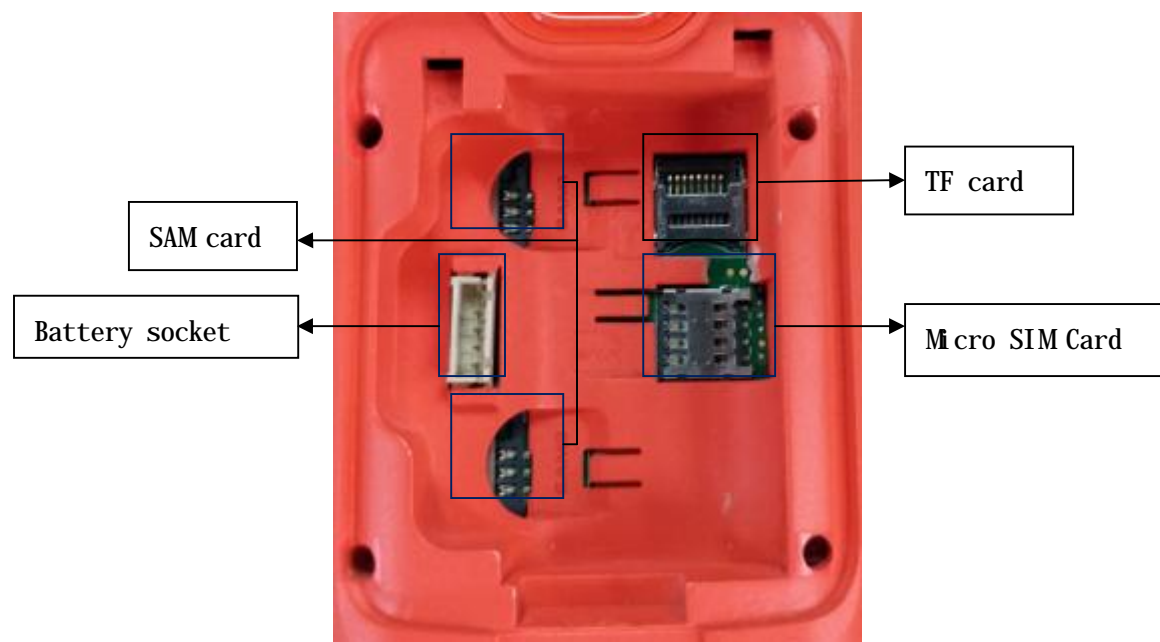

SIM card/SAM card installation: Open the back cover, remove the battery, and gently insert the micro SIM card in the correct direction into the corresponding card slot. The SAM card installation is similar to the micro SIM card.

TF card installation: Push the TF card holder in the direction of "OPEN" , and then pull the holder upwards by 90 degrees, put the TF on the card holder in the correct direction, then lower the holder, and then press the holder. "LOCK" direction

buckle.

**Battery Installation:** Hold the battery cable plug in the correct direction and insert it into the battery connector and press down to the bottom. Then put the battery in the compartment and install the battery in place. Then close the battery cover.

**Remarks:** When removing the battery, hold the device with one hand and hold the battery connector in one hand and pull it out.



Note:

1. SIM card specifications for Micro SIM card.
2. The micro SIM card and SAM card can be inserted into the position, but it cannot be pushed by brute force.
3. When the TF card is installed or disassembled, please push or pull it in the correct direction indicated by "OPEN" or "LOCK" on the holder to open or fix it. Do not



pull the TF card holder directly.

4. Hold the battery connector when installing or removing the battery. Never use brute force to pull the battery cable.


### Paper placement instructions

- 1、Open the cover of the printer and pull it outwards to open the printer cover
- 2、Place the print side of the paper into the printer paper tray with the print side facing up and the print side of the paper into contact with the printer metal sheet
- 3、Cover the paper cover and hear a click.



### Magnetic stripe card operation instructions

The magnetic stripe card swipe area is on the right side of the device. When the card is swiped, the device and the bank card are taken at the same time. The magnetic stripe of the magnetic stripe card is pressed against the magnetic block in the swiping slot and passed through the swiping slot. After the card is completely horizontal, the card can be raised after being inserted into the card slot. The direction of the magnetic stripe card cannot be changed in advance so as not to affect the success rate of the credit card. Two-way credit card.

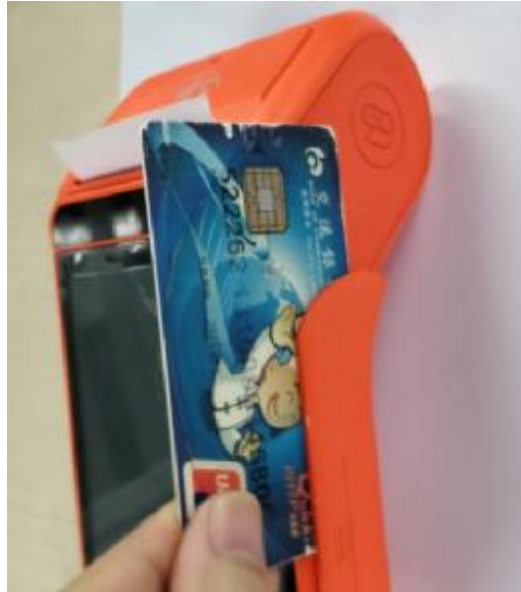

### Contact IC card operation instructions

Touch the card slot on the IC card at the bottom of the device. Insert the metal contact of the IC card upwards into the IC card slot with the side facing upward until you feel that the card cannot be pushed in again. Do not insert or pull the card with brute force to avoid damage. IC card chip or device IC deck.



### Non-contact IC card operation instructions

The non-connected card swiping area is at the cover of the printer. When swiping the card, the non-contacting card is affixed to the card reading area. It is recommended that the non-contact IC card be read in parallel with the card reading area and the distance is controlled within 0-3 cm. Guarantee the success rate of




reading.




### Computer online operation instructions

When your personal computer is installed with an android system driver or a mobile assistant is installed, you can connect the device to a personal computer via the USB data cable provided with the device. (You can download the above software from the official website or other website).

After you install the above software, insert the USB cable that comes with the device into the USB port of the device and the computer. The following prompt screen appears on the device:

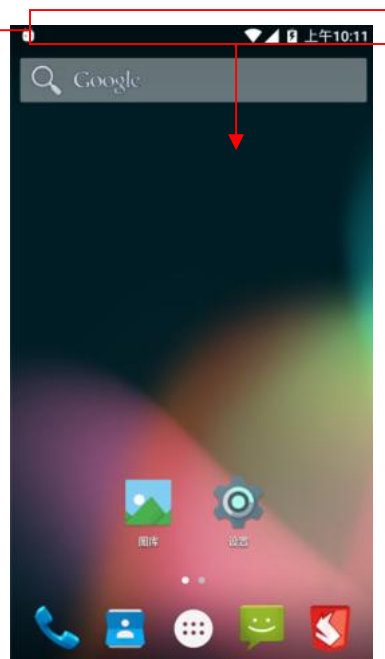

Tap the top of the screen, drag downwards and the USB setting interface will appear.

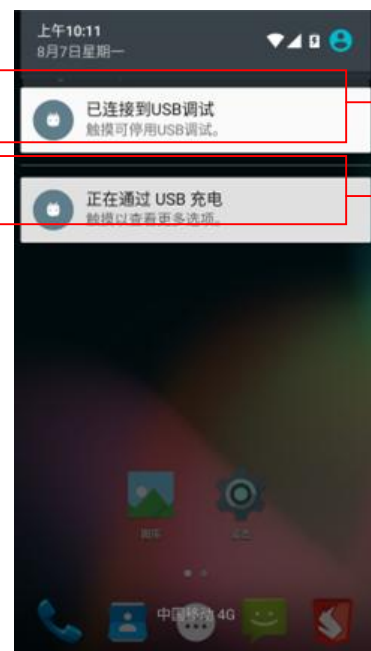

Click on this to go the next left interface

Click on this to go the next right interface



Turn the switch into USB debugging mode



Check this box to open the internal storage disk and external storage disk on the device

Turn on "MTP" to see the storage device on the Windows PC → My Computer at the same time, and the data can be transferred and stored.

Note: The built-in memory card on the device can be used as a removable disk, such as inserting an external memory card, and two removable disks will be visible on my computer.

Online upgrade: You can upgrade the system of the device through online upgrade. If there is a security risk due to non-owner company's flashing or online upgrade, it is recommended that you back up the important data in the device to the storage device before upgrading.